



AT6400 AllTouch IR Universal Remote Control

User Guide

Welcome to the Ultimate Control Experience

Your new AT6400 AllTouch® Infrared (IR) Universal Remote Control (remote) is a true universal remote functioning as four remotes in one. As one example, you can use this remote to operate your set-top, your TV, and two other devices, such as a DVD player and VCR

Important Information About Your Remote

Your remote is initially programmed to only operate your set-ton. Therefore, you must program the emote to operate your TV, VCR, or other devices See Program the Remote to Control My Devices to learn how to enter device codes and

Note: You must use the IR remote within line of sight of the set-top to operate the set-top

How Does A Universal Remote Control Work?

You tell the remote which type of device you want to operate using the four keys arched across the top of the remote. These keys, known as mode keys, are labeled STB, TV, DVD, and AUX. Each mode key is associated with a specific device. As an example, after programming the remote, if you want the remote to operate your TV, you simply press the TV key. Other keys you press on the remote, thereafter, should operate your TV. Want to switch the remote to operate a different device? Just press the mode key for the next device you want to operate. In this guide, you will learn which types of devices you can control and how to program the remote to control your

Where Do I Start?

Refore you begin using your remote, complete the following initial setup tasks

Install the Batteries

The remote requires two AA batteries (alkaline recommended). Adiagram in the battery compartment of the remote indicates proper placement of the batteries. When batteries are properly installed, the light on the remote blinks each time a key is

Visit the Quick Reference Section

Use the Quick Reference section of this guide to familiarize yourself with the remote and the functions of its various keys. Knowing the function and location of the keys on the remote will assist you when you are programming the remote.

Program the Remote

To learn how to program your remote, refer to the sections What Devices Can I Control, What Devices Do I Want to Control, and Program the Pamote to Control My Davices for further

Find a Place to Store Your Remote

Keeping up with one remote is much easier than keening up with four or five remotes. However it is still a good idea to find a storage location for your remote The AT6400 is not a toy. It should be kept out of the reach of children under the age of 6 years.

Program the Remote to Control My Devices

Your remote is initially programmed to only operate your eat-ton. You will need to eat up the remote to operate your other devices using its TV, DVD, and AUX modes. The TV key may be programmed to operate a standard or high-definition television (HDTV). The DVD key may be programmed to operate a DVD player. The AUX key may be programmed to operate a VCR, a receiver, an amplifier, or a Home Theater in a Box (HTIB) system. If the remote provides only limited functionality for a device, you can look for a code

000

Ö

0 - 0

0

△ ■ ◎

000

10 0 01

اللَّهُ وَ قِلَا

#OPEN

cisco

Kevs

-Enter

T12123

Š0

Quick Reference

Refer to the code tables at the end of this quide to locate additional programming codes.

Note: You have the option to assign some remote keys to operate one device type only. For example you may want to assign volume control to the TV only If this is the case, you can reprogram power, volume, and channel control using procedures found later in

Assigning a Device Code to a Mode

Kev 1. Refer to the code tables at the end of this quide to locate the information for the device you want to

program Note: If your device is not listed, you may be able to program the remote using the Auto-Search function. Go to What If None of the Codes Work for

- 2. Turn on the device that you want to assign to a
- mode key 3. Press and hold the appropriate mode key (TV, DVD, or AUX) on the remote, and then press and hold the OK key.
- Release both keys and the mode keys blink twice. 5. Enter the first 4-digit setup code for the device using the numeric keys (0-9) on the remote. The mode key blinks three times to indicate that the code entry was

accepted

- · When an invalid code is entered, the selected mode key displays a long flash to indicate that
- you have not entered the code correctly Should the remote time-out before you complete the code setup, you must start over. This is
- indicated by one long flash of the red LED. 6. Point the remote at the device, and press POWER to test the device
- 7. Did the device power off? . If was, write this code number in the table found in this guide. You may need it again if the device
- code is accidentally erased. . If no, repeat this procedure from step 3 using a different set in code
- Note: If none of the codes listed for your brand of device operate the device correctly, go to What If None of the Codes Work for instructions.
- 8. Repeat this procedure for each mode key you want

What If None of the Codes

Work? If none of the codes listed for your brand of device operate the device correctly, or if your device is not listed in the codes table, you can use the Auto-Search. function to search through the code library for a valid ode. This section provides procedures for using the Auto-Search function to search the code library for

the remote to program the code in the remote and TV DVD and ALIX mode codes. the mode key flashes three times indicating Note: Dead the propertures in this section thoroughly successful entry. before beginning. You need to be prepared to · Step forward - Press the fast-forward (FF) key on the remote to step ahead through the codes

DI AV

observe the behavior of the remote one at a time. Then, return to sten 6 Auto-Search Features Step backward - Press the rewind (RFW) key on

- Consider the following items when using Auto
- The Auto-Search function begins searching from If a valid code is not found, the green backlight blinks
- twice and the remote returns to normal operation. If any other key is pressed except PLAY, ENTER,
- POWER, EXIT, REW, FF, or numeric keys 1 thro 4 (when programming the ALIX mode key) the mode key displays a long red flash (error message) and the remote returns to normal operation.
- Should the remote time-out before you complete the Auto-Search function you must start over. This is indicated by one long flash of the red LED.
- If the riesing is not listed and the Auto-Search function is unable to find a usable code, you may need to use

the original remote provided with the device Auto-Searching the Code Library for TV or DVD Mode Codes (Program Code 922)

- Note: This procedure only applies to TVs and DVDs. 1. Turn on the device you that you want to assign to the TV or DVD key.
- 2. Point the remote at the device Press and while holding a selected mode key (TV or DVD), press the OK key. For example, to search for a TV code, press and hold TV and OK at the same
- 4. Release both keys and all the mode keys blink

- 5. Enter the programming code 9 2 2 by pressing the numeric keys on the remote. The mode key you
- selected in step 3 blinks twice to indicate a successful entry. 6. Point the remote toward the device, and press

7. Your device powers off when it finds the correct

. Save code and evit - Press the ENTER key on

the remote to step back through the codes one at

Fxit without saving the code - Press the FXIT

flashes three times and returns to normal

Send the current code - Press the POWER key

on the remote to send the current code. If the

device turns back on, press the ENTER key. If the

Continue with auto-search function - Press the

PLAY key on the remote to continue with the auto search function. Then, return to step 6.

Auto-Searching the Code Library for

AUX Mode Codes (Program Code 922)

1. Turn on the device that you want to assign to the

3. Press and while holding the AUX key, press the OK

4. Release both the AUX key and the OK key and all

5. Enter the programming code 9 2 2 by pressing the

6. Press the PLAY key, choose one of the following

device categories and then, using the number keys

on the remote, press its assigned number (1 - 4)

Note: The device categories are number-coded to

Note: These keys are assigned to the TV when the

TV mode key is programmed with a valid code.

provide a more direct programming method.

2 = Receiver/Tuners

4 = HTIR

numeric keys on the remote. The AUX key blinks

Point the remote at the device.

the mode keys blink twice

based on the following list:

Adjusts valume

1 = VCRs

3 = Amplifiers

Sound Control

twice indicating a successful entry.

device does not turn on return to step 6

a time. Then, return to step 6.

operation

code. Then, choose one of the following options:

- 7. Point the remote toward the device, and press 8. Your desires navere off when it finds the correct
 - code. Then, choose one of the following options: · Save code and exit - Press the ENTER key on the remote to program the code in the remote and the mode key flashes three times indicating
 - successful entry · Step forward - Press the fast-forward (FF) key on the remote to step ahead through the codes
 - one at a time. Then, return to sten 2 Step backward - Press the rewind (RFW) key on the remote to step back through the codes one a
 - a time. Then, return to step 7.
 - Exit without saving the code Press the EXIT key on the remote. The selected mode key flashes three times and returns to normal Send the current code – Press the POWER key on the remote to send the current code. If the
 - device turns back on, press the ENTER key. If the device does not turn on ireturn to sten 7 Continue with auto-search function – Press the PLAY key on the remote to continue with the autosearch function. Then, return to step 7.

Reassign Mode Keys You can reassion a mode key to operate a different

device. For example, you can reassign the AUX key to operate a DVD player or a TV. If you reassign a key, be sure you update the table found in this quide.

Reassigning Mode Keys (Program Code 944)

- 1. Press and hold the STB mode key on the remote 2. Without releasing the STB key, press and hold the
- OK key 3. Release both the keys and all mode keys flash twice
- 4. Enter the programming code 9 4 4 by pressing the numeric keys on the remote. The STB mode key blinks twice indicating a successful entry. 5. Press and release the mode key associated with the
- type of device you want to control, and then press and release the mode key that you want to change The newly assigned mode key blinks one time ndicating a successful entry.

There are red LEDs underneath each of the four

mode keys (STB, TV, DVD, and AUX) that flash

each time a key is pressed to show which device

illuminated for a short time after a key is pressed

During programming, if the remote times out before

you complete the code setup, you will need to start

What Devices Do I Want to

To help you keep track of the devices you want to

control. list the type of devices you have (including

brand) in the following table. Then, use the code table

at the end of this quide to locate the codes for your

device. For example, look under TV Group if you

need to program the remote to operate your TV. If you

have two devices that use the same key you must

reassign the TV, DVD, or the AUX key. The STB key

cannot be reassigned. Go to Reassign Mode Keys. Otherwise, go to Program the Remote to Control

Brand Code

2066

My Devices for additional instructions

Device

over. This is indicated by one long flash of the red

LED Indicators

Control?

Mode

Key Type

AUX

the key is currently controlling.

Some common examples To program the AUX key to operate your DVD player, press DVD and then AUX.

associated with the mode you selected in this procedure whether in STR_TV_DVD_or AUX mode To program the DVD key to operate your TV. press TV and then DVD. Controlling Channels for Different

Change Volume Control

Channels for One Device procedure. 2. Press and release the Enter key. The STB mode key blinke three times to indicate a successful entry.

After you press the Enter key, the channel key now controls the device associated with the mode key you select. For example, in TV mode, the channel key controls the TV but in STR mode, the channel key

The channel key now always controls the device

1. Complete steps 1 through 4 of the Controlling

Devices (Program Code 966)

- . If any other key is pressed except the Mode keys and the ENTER key the remote does not accept any changes or updates. The STB mode key displays a long red flash and the remote returns to normal operation
- If the remote times out before you complete programming channel selection control, the remote does not accept any changes. You must start over from step 1 of this procedure.

The POWER key on the remote is set by default to

control the power switch on one device at a time, in either mode (STR TV DVD or ALIX) When in STR mode, the remote switches the set-top from OFF (standby mode) to ON, or from ON to OFF (standby mode). However, you can alternatively program the POWER key to control the power switch on up to four devices at the same time, instead of controlling one device at a time. It is highly recommended that you set up the POWER key to turn on and off your set-top and your TV at the same time. Turning off the set-top saves electricity and extends the life of the box. When turned off, the set-top can still record scheduled programs on its DVR and perform any other necessary functions. Controlling Power for Multiple

Devices at Once (Program Code 977) Press and hold the STB mode key on the remote

- OK key. 3. Release both keys and all mode keys blink twice.
- 4. Enter the programming code 9 7 7 by pressing the
- 5. For the first device press the STB key. The STB mode key blinks twice.
- key (TV, DVD, or AUX). The selected mode key
- 7. Repeat step 6 for up to two more devices (total of
- four devices). 8. Press the ENTER key to complete the power switch
- control programming. The last selected mode key blinks 3 times to indicate a successful entry.
- Example: In an example scenario where you press

regardless of which mode the remote is in (STB, TV,

The remote is set by default to control channel Controlling Power for One Device selection on the set-top. You can also program at a Time (Program Code 977) channel control to control any of the TV_DVD_or ALD mode devices provided the device allows for channel

2. Press the ENTER key to complete the power switch

After you select a morte, the DOIAIED key controls the

device assigned to that mode. For example, in TV mode, the remote controls power for the TV only

and the ENTER key, the remote does not accept any changes or undates. The STB mode key displays a long red flash and the remote returns to

programming power switch control, the remote does not accept any changes. You must start over from

3. Release both keys and all mode keys blink twice. step 1 of this procedure. 4. Enter the programming code 9 6 6 by pressing the numeric keys on the remote. The STB mode key blinks twice to indicate a successful entry. 5. Press and release the mode key for the device you

Change Power Control Controlling Volume for One Device

2. Without releasing the STB key, press and hold the OK key. Release both keys and all mode keys blink twice. 4. Enter the programming code 9 5 5 by pressing the

number keys on the remote. The STB mode key blinks twice indicating a successful entry. 5. Press and release the mode key for the device you want the volume keys to control. For example, if you want to control volume through your TV, press and

release TV. The selected mode key blinks three times to indicate a successful entry The volume keys now control only one device whether you are in STR TV DVD or ALIX mode

key blinks three times to indicate a successful entry

After your presents a Enter key the volume keys control

the device assigned to that mode. For example, in TV

mode, the volume keys control volume for the TV only

If any other key is pressed except the Mode keys and the ENTER key, the remote does not accept any

changes or updates. The STB mode key displays a

long red flash and the remote returns to norma

programming volume control, the remote does not

accept any changes. You must start over from step

. If the remote times out before you complete

Change Channel Control

control assignment. Or you can set the channel

selection control programming to control channels (or

page up or down) for all of the devices programmed

in the four mode keys. Otherwise, you can only

control channels (or page up or down) on a specific

Note: The channel control keys include CH/Page,

Controlling Channels for One Device

1. Press and hold the STB mode key on the remote.

2. Without releasing the STB key, press and hold the

device, for example, the TV or DVD

(Program Code 966)

Jump, and the numeric keys 0 through 9.

operation.

1 of this procedure

Controlling Volume for Different Devices (Program Code 955) Volume for One Device procedure. 2 Press and release the Enter key The STR mode

2. Without releasing the STB key, press and hold the 1 Complete steps 1 through 4 of the Controlling

numeric keys on the remote. The STB mode key blinks twice to indicate a successful entry.

6. For the second device, press the applicable mode

blinks twice

only TV in steps 6 and 7, the POWER key controls both the set-ton and the TV at the same time

DVD ~ ALIX)

1. Complete steps 1 through 4 of the Controlling Power for Multiple Devices at Once procedure

control programming. The last selected mode key blinks 3 times to indicate a successful entry.

If any other key is pressed except the Mode keys

normal operation If the remote times out before you complete

want the channel key to control. For example, if you want to control channels on your TV, press and release TV. The selected mode key blinks three times to indicate a successful entry.

Device Control

Turns devices on or off Enables set-ton mode functions

Enables TV mode functions

Enables DVD mode functions

Enables AUX mode functions

DVR, VOD, DVD, VCR Control

- In STB mode, these keys control DVR and VOD.
- In DVD and AUX modes, these keys may control your DVD or VCR depending on how you have programmed the remote.

Records the selected program

sources

Rewinds or task to DVR or VOD content

Skips backwaru u. .

DVR or VOD content

Stops DVD, VCR, VOD, or DVR content

Pauses DVD, VCR, VOD, or DVR content

Plays DVD, VCR, VOD, or DVR content Scrolls through available TV or video input

Rewinds or fast forwards through

Skips backward or forward through

watching TV. Moves up or down one page in the IPG and in some menu screens

Viewing and Browsing Control Accesses the On Demand menu

Returns to previous screen Accesses the Main Menu

Accesses the DVR list of recordings

Enables Interactive mode

Moves through selections

Selects and deselects screen items

Returns from menu screens and to viewing TV or video

Selects options in menus and the

Displays text information about the selected

(SUR) Displays or closes the IPG

Returns to last channel viewed Selects the next channel up or down when

What Devices Can I Control?

remote tell the remote which device you want to



Each mode key is associated with different types of devices. You can use each mode key to control one of its associated devices:

Mode Key Associated Devices STR TV* DVD* DVD players

AUX*

IP gateway set-ton TVs (including HDTVs)

this guide for instructions.

There are also green LEDs that illuminate several keys whenever the remote is in use. They stay Mutes sound

Numeric Keys Enters channel numbers text and

remote codes. Also use to enter vo parental control PIN

Clears text and numbers in text fields Enters and saves (stores) an entry. Sizes the

picture for some high-definition television (HDTM) modele

The four mode keys arched across the top of the



DVD Sony DVD TV DVD

Theater in a Box (HTIB) * These keys can be reassigned to control different devices. Go to the Reassign Mode Keys section of

VCRs, receivers, tuners, and Home

By default, once the TV mode key is programmed with a valid code, the volume and mute buttons contro

your TV. These keys adjust the volume of your TV higher, lower, or temporarily switch the volume off (Mute), regardless of whether the remote is in STB, TV. DVD. or AUX mode.

If you prefer, you can choose to have the volume and

mute buttons always control a different device rather than your TV such as a home theater receiver. (See Controlling Volume for One Device below.) Note that you must first program one of the mode keys. such as ALIX with a valid code for that device Alternatively you can choose to have the volume and mute buttons control different devices when the

remote is in different modes. For example, you might want to control the volume on your TV when in TV mode, but the volume on your home theater receiver when in AUX mode. (See Controlling Volume for Different Davices below) Note that not all devices have volume controls, so if you choose this option, the volume and mute buttons may do nothing in some modes, such as STB and DVD.

(Program Code 955) 1. Drage and hold the STR mode key on the remote

Put It Back the Way I Got It You can return all advanced functions back to their

original settings by resetting the remote to factory default settings by reacting the remote to factor default settings removes all of the programming you have entered for the remote. You must reprogram the remote to restore your original settings.

Resetting the Remote to Factory Default Settings (Program Code 900) Press and hold the STB mode key on the remote.

- Without releasing the STB key, press and hold the OK key 3 Dalagea host keue and all mode keue hink tuine
- 4. Enter the programming code 9 0 0 by pressing the numeric keys on the remote. The STR mode key hinks four times to indicate you have successfully reset the remote to factory default settings.
- . If any other key is pressed expent the numeric keys, the remote does not accept any changes or updates. The STB mode key displays a long red flash and the remote returns to normal operation.
- If the remote times out before you complete the factory default reset procedure, the remote does not accent any changes. You must start over from step 1 of this procedure.

Troubleshooting If there is no response when you press the keys on

the remote, please check the following items before calling for service.

Check the Batteries · Are the hatteries inserted correctly?

- Check the battery condition for leakage. Replace with new alkaline batteries.
- Check the Device

. Is the device's power cord connected to the power

- outlet? · Is the device switched on?

Check the IR Database Codes List Is the device brand name for the device listed in the

. If was and there is more than one code listed try

- using a different code to provide more functionality. . If no to the following:
- Use the Auto-Search function to find a usable code - If the Auto-Search function is unable to find a
- usable code, you may need to use the original remote provided with the device. Code Tables

If the remote does not recognize your device, you can find codes for your device by brand name. Code tables

in this section are organized by the devices assigned to each mode (TV, DVD, and AUX)

TV Mode Group

Abex	1098
Admirel	1009 1022 1023
Admira	1265, 1376, 1476, 1285 1594
Adventura	1100
Also	1034, 1098
Akai	1034, 1096 1016, 1001, 1156, 1432, 1524, 1612
Alaron	1016, 1061, 1156, 1432, 1524, 1612
	1408
Alenvare	
America Action	1035
ADC	1018, 1361, 1562, 1600, 1635
Apex Digital	1058, 1111, 1163, 1520
Audiovox	1036, 1135, 1455
Bang & Olufsen	9453
Belcor	1018
Bell & Howell	1001, 1043
BenQ	1041, 1136, 1545, 1557
Bradford	1036
Broksonic	1023, 1028, 1114, 1382
Brokwood	1018
Candle	1007, 1061, 1100, 1363
Celebrity	1002
Citizen	1011, 1015, 1061, 1073, 1100,1114, 1363
Clarion	1035
Concerto	1363
Contec	1036
Craig	1036
Crosley	1002, 1047
Crown	1011,1036
Curtis	1320, 1629, 1642
Curtis Mathes	1001, 1009, 1013, 1043, 1073, 1094, 1385
CXC	1036
Cytron	1232 1456
Daewoo	1011, 1013, 1015, 1018, 1043, 1106, 1135, 1508, 1524
	1638
Dayton	1018
DiamondVision	1499, 1401
DirecTV	1374
Dumont	1018, 1020
	1023, 1024, 1036, 1333, 1481

, 1589, 1598, 1609 1011, 1020, 1022, 1023, 1028, 1031, 10 1045, 1080, 1097, 1101, 1102, 1107, 13 1081, 1381, 1590, 1582

1007, 1022, 1029 1002, 1022, 1-24, 1036, 1090, 1554

1094, 1144, 1164, 1224, 1367, 1380, 13

1018, 1020, 1081 1004, 1005, 1011, 1018, 1050, 1090, 1

TV. continued

	Sheng Chia
	Sherwood
	Shogun
33, 1035, 1044, 12, 1465	Signature
12, 1460	Simpson
	Skyworth
	Sole
	Sony
	Sounderign
49, 1063, 1068, 81, 1385, 1386	Sova
81, 1380, 1389	Soyo
91, 1097, 1098,	Spectroniq
	Squareview
	555
	Stack9
	Statite

Sunfinite

TV continued

1922, 1225, 1384 1040, 1436, 1457 1034, 1932, 1437, 1501, 1507, 1510, 1503, 1505, 1506

1285, 1376, 1521, 1594 1011, 1012, 1026, 1049, 1052, 1054, 1055, 1080, 1092, 1117, 1131, 1235, 1288, 1239

1043, 1047, 1058, 1058, 1094, 1333 1004, 1007, 1018, 1053, 1056, 1057, 1059, 1050, 1053 1110, 1147, 1228, 1250, 1300, 1301, 1302, 1321, 1326, 1339, 1365, 1365, 1371, 1384, 1387

018, 1032, 1061, 1333, 1380 011, 1020, 1049, 1068, 1094, 1096 221 205, 1009, 1018, 1032, 1153, 1333, 1535, 154

1058, 1333, 1363, 1550 1018, 1061, 1193, 1363, 1377, 1423, 1523, 1525, 1543

015, 1061, 1333 112, 1183, 1531, 1562, 1568, 1569 3, 1096, 1145, 1165, 1169, 1305

1022, 1023, 1028, 1121, 1122, 1382, 1511 1292, 1295, 1303, 1304, 1305, 1306, 1385

1011, 1012, 1018, 1021, 1058, 1063, 1073, 1094, 1098, 1333, 1380, 1385, 1558 1003, 1004, 1005, 1007, 1011, 1018, 1053, 1056, 1057,

1059 1003, 1004, 1007, 1011, 1017, 1018, 1053, 1056, 1057, 1059, 1060, 1063, 1110, 1126, 1129, 1148, 1155, 1238, 1263, 1264, 1265, 1290, 1291, 1307, 1308, 1309, 1317

1040, 1111, 1232, 1262, 1371, 1391, 1392, 1393, 1407, 1440, 1446, 1460, 1565, 1563, 1596, 1604

1000, 1061, 1068, 1294, 1396, 1558, 1605, 1614

1018, 1020 1049, 1064, 1096, 1169, 1305, 13

1011, 1018, 1043, 1061, 1064, 1068, 1090, 1094, 1098 1233, 1363 1000, 1003, 1004, 1005, 1008, 1018, 1049, 1065, 1066, 1067, 1068, 1069, 1070, 1071, 1082, 1102, 1104, 1106, 1108, 1115, 1151, 1162, 1167, 1168, 1268, 1268, 1271, 1271, 1271, 1278, 1268, 1278, 1271, 1271, 1278, 1268, 1278, 1271, 1011, 1018, 1036, 1043, 1061, 1064, 1098, 1333, 1363

RedateD

1097, 1098, 1156, 1161, 1297, 1323, 1360, 1363, 1364 1023, 1024, 1064, 1090, 1114, 1121, 1382, 1593 1043, 1047, 1062, 1096, 1380, 1527 1018, 1022, 1028, 1036, 1333, 1428 1000, 1004, 1012, 1018, 1044, 1045, 1047, 1055, 1058. 1002, 1109, 1137, 1201, 1202, 1249, 1272, 1275, 1276 1277, 1278, 1317, 1356, 1374, 1384, 1388 1566, 1578, 1591 1015 1036 1405 1035

DVD. continued

2330 3002 3059 3023 3124 3127 319

1320 1297, 2303, 2339, 2352, 2363, 2368, 237

2017, 2080, 2070, 2070, 2194, 2105, 2106, 2111, 2107, 2179, 2180, 2198, 2007, 2211, 2212, 2221, 2228, 2246, 2151, 2153, 2154, 2155, 2258, 2268, 2300, 2318, 2384, 2387,

280, 230, 234, 234 2018, 2032, 2033, 2045, 2051, 2091, 2109, 2156, 215 2158, 2159, 2169, 2208, 2209, 2222, 2243, 2259, 226

2264, 2282, 2285, 2302, 2304, 2318, 2320, 2321, 2404

2009 2010, 2048, 2055, 2063, 2077, 2099, 2107, 2118, 2161.

2233, 2246, 2274, 2279, 2286, 2290, 2294, 2295, 2299, 2211, 2314, 2333, 2340, 2347, 2351

2121, 2397 2014, 2020, 2022, 2065, 2067, 2068, 2069, 2073, 2087, 2103, 2108, 2113, 2162, 2171, 2176, 2178, 2182, 2187, 2189, 2192, 2193, 2201, 2202, 2203, 2236, 2238, 2244,

302, 2064, 2076, 2092, 2194, 2213, 2321, 2327, 2408

2023, 2025, 2037, 2038, 2040, 2041, 2054, 2080, 2084 2023, 2025, 2037, 2038, 2040, 2041, 2054, 2080, 2084 2088, 2091, 2094, 2148, 2148, 2148, 2148, 2145, 2197

2316, 2334, 2341 2135, 2312, 2346, 2349, 2350, 2358, 2401, 2402, 2403

1356, 2357, 2405, 2406, 2407

AUX Mode Group

2293, 2318, 2320, 2321, 232

2005, 2117 2006, 2219, 2220, 231

2337, 2400

1319, 2322, 2331

Polaroid

1365 1009, 1027, 118 Supre-Macy 1004, 1007, 1018, 1027, 1153, 1056, 1057, 1059, 1060, 1024, 1150, 1145, 1279, 1286, 1387, 1464 1024, 1031, 1036, 1105, 1280, 1384 1004, 1049 1001, 1007, 1011, 1015, 1018, 1022, 1032, 1036, 1047

00 1040 1058 1073 1175 1170 1100 1101 1155

208, 1180, 1181, 1184, 1185, 1187, 1188, 1190, 1206, 501, 1409, 1441, 1500

408 700 INTE 1001 1000 1007 1000 1001 1001 1001 1058 1135, 1178, 1184, 1515, 1544, 1555, 1567, 1616

1018, 1061, 1206, 1533, 1536 1001, 1002, 1013, 1015, 1020, 1023, 1054, 1061, 1000 HDTV

	DVD Mode Group
rhiba	1223
wp	1247
Taung	1016, 1056
A	1000
neer	1035
rasonic	1010, 1096, 1169
vis	1406

DVD

Apex Digital

2378
2342
2342
2001, 2056, 2057, 2001, 2095, 2098, 2229, 2250, 2 2322, 2330
2261, 2262, 2263, 2266, 2269, 2291
2325
2354
2132, 2373, 2388
2379
2324, 2370
2136, 2322
2122, 2130, 2215
2336
2053, 2072, 2284
2395

Amplifier 2316,

5000, 5047, 6058

6033,6048

Amplifier, continued

5025, 6046 6029, 6030, 6031, 603

040 020 8042 8044 80

Audio

Home Theater in a Box (HTIB) 2149, 2150 **** 1108 1147 1190, 2096, 2097, 2115, 2166, 2204, 2206, 2217, 2218, 2232, 2242, 2265, 2277, 2283, 2359, 2360, 2361, 2362, 2364, 2365, 2366, 2367 2340, 2353 2002, 2018, 2033, 2089, 2237, 2241, 2245, 2259, 2270.

4002, 4013, 4014, 4028 2035, 2217, 2218, 2283 4050, 4051 2385, 2386 4006, 4019, 4027, 4039, 2036, 2222, 2382, 2394 4007, 4020, 4021, 4029 2016, 2223, 2224 2294, 2299, 2295, 2314

2397 4009, 4010, 4022, 4023,

Receiver/Tuner

. I 5001 5002 5004 5005 5006 5034 5143 5000, 5143 ,5145 5008, 5035, 5036, 5037, 5038, 5039, 5040, 5041, 5042,

133 000, 5009, 5055, 5056, 5142, 5140 5066, 5067, 5068, 5123, 5127, 5128, 5132, 5148 5070, 5071, 5072 5018, 5073, 5074, 5075, 5076, 5077, 5078, 5079, 5080

000, 5112, 5136, 5143, 5146, 5154 021, 5022, 5088, 5089, 5090, 5091, 5092, 5093, 5094, 4, 5025, 5026, 5137, 5144

, 5023, 5028, 5029, 5030, 5031, 5032, 5033, 5095 5097, 5113, 5117, 5121, 5125, 5129, 5133, 5134 5136, 5146 5016, 5019, 5020, 5098, 5099, 5100, 5101, 5115, 5122. 000, 5021, 5143 003, 5014, 5015, 5021, 5102, 5103, 5104, 5105, 5106,

VCR

Tombook

3081, 3082, 3292, 3

VCR. continued

.23 J11, 3013, 3021, 3076, 3120, 31

3066, 3073, 3109, 3110, 3188, 3193, 3221

1055 1005, 3006, 3007, 3014, 3055, 3060, 3067, 3118, 312 1122, 3123, 3124, 3125, 3126, 3127, 3151, 3170, 317 3122, 3123, 3124, 3125, 3126, 3127, 3151, 3170, 3171, 3194, 3205, 3228, 3229, 3230, 3231, 3234, 3235, 3236, 3237, 3247, 3248, 3250 3005, 3006, 3007, 3014, 3055, 3060

11, 2183, 2190, 3206, 3211 1, 3004, 3007, 3016, 3021, 305

3094, 3202, 3213 3016, 3053, 3062, 3063, 3077, 3078, 3079, 3086, 3087.

3016, 3036, 3037 3016, 3036, 3047, 3061, 3071, 3135, 3160, 3161, 3173, 3238, 3216, 3243, 3244, 3246, 3250, 3251

1199, 3201, 3203, 3206, 3212, 3243, 3249, 3250

1059, 3084, 3089, 3101, 3148, 3184, 3214, 3215, 3001, 3051

3090, 3052, 3211 3047, 3080, 3100, 3137, 3163, 3164, 3048, 3049, 3058, 3085, 3104, 3138, 3139, 3140, 3178

3179, 3187, 3192, 3195, 3209, 3211, 3217, 3223, 3224, 3225, 3226, 3240, 3245 3016, 3021, 3036, 3037, 3038, 3061, 3088, 3095, 3105.

VCR, continued

3141, 3142, 3149, 3165, 3166, 3167, 3168, 3180, 3182, 3185, 3210, 3219, 3220, 3223, 3227, 3241 3001, 3011, 3016, 3021, 3023, 3047, 3052 3005, 3006, 3007, 3014, 3055 3048, 3051, 3058, 3064, 3077, 3097, 3119, 3143, 3144 3186, 3196, 3198, 3202, 3204, 3211, 3213

Combination Device Codes If you have a combination device, you may need to reserves the ALTY key to operate one of the devices

for example, the VCR. The following tables provide combination device is not listed, simply look for the corlee for each cenarate device

VCR

190 378, 3172, 319

3214, 3218, 3232

3219, 3227, 3241

nvn

VCR

3213, 3202

3081, 3213, 3202

3072, 3119, 3186, 3186

2005, 2007, 2171, 2238, 3104, 3084, 2174, 2187 2244, 2007, 2355, 2356, 3192, 3178, 3224, 3225 2357 3240

2357 3220, 3240 2080, 2084, 2168, 2235, 3103, 3102, 3180, 3185,

DVD/VCR Combo חעח

2166, 2359, 2360, 2361, 2362, 2364, 2365

2052, 2128, 2234, 2236

TV/DVD Combo

TV/VCR Combo

Brand TV

America Action 1036

Curtis Mathes 1385

1121, 1382, 1383

1382, 1383

TV

If you program codes to control devices, record your Device Type 2073 2046, 2127, 2129, 2230, 2002 2110 2100 2100 Key

Example DVD 2066 DVD Sony TV DVD AUX

Brand Code

FCC Compliance United States FCC Compliance

TV/VCR Combo, continued

TV/DVD/VCR Combo

T۷

1295 2213

Device Program Codes

1967 1968 1310 1380 3093 3094 3162 3201

3007 3213 3202

VCR

rease the separation between the equipment and receiver, med the equipment into an outlet on a circuit different from that to which

www.voener.is connected.

Consult the cable company or an experienced radiofelevision technician for hair.

nep. Any changes or modifications not expressly approved by Scientific-Atlanta, Inc. could void the user's sufficilly to operate the equipment.

FC Declaration of Conformity

This device complies with Part 15 of FOC Rules. Operation is subject to the following two conditions: 1) the device may not cause harmful interference, and 2 the device must accept any interference received, including interference that may make underty coversion.

AllTourh IR I Iniversal Remote Control Scientific Atlanta Inc.

5030 Sugarloaf Parkway Lawrenceville, Georgia 30044 USA Telephone: 770,238,1077 Canada EMI Regulation

Cet appareil numérique de la class B est conforme à la norme NMS-003 du

20050528 ECC Shardard



5030 Sugarical Parkway Sox 405447 Jawrenceville, GA 30042 678.277.1000 www.scienti catianta.co

Claco, Claco Systems, the Claco logo, the Claco Systems logo, Scienti c Atlanta, and AllTouch are registered trademarks or trademarks of Inc. and/or its af liates in the U.S. and certain other countries. © 2006, 2008 by Claco Systems, Inc. All rights reserved.

September 2008 Remote Control Part Number 10110198 (MS version) Jeer Guide Part Number 4013051 Ray D