


VTelevision

Remote Guide

Technical Support:
(802) 885-9002 / (888) 242-7584

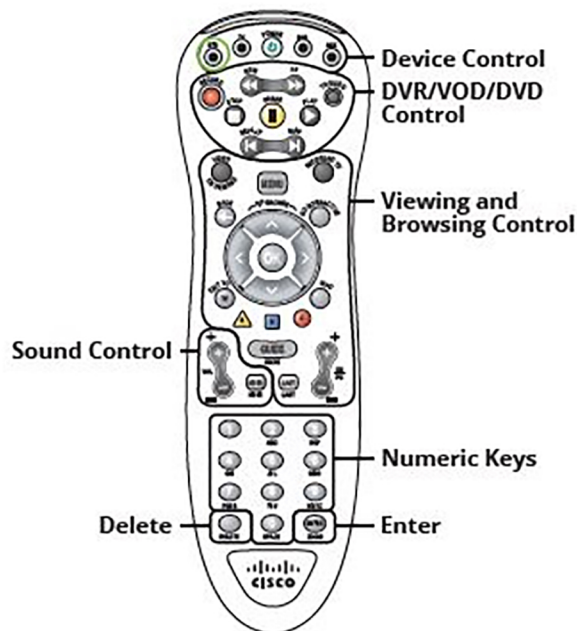

Device Control

- Turns devices on or off
- Enables TV mode functions
- Enables DVD mode functions
- Enables AUX mode functions
- Enables VTelevision
- Enables DVD mode functions

DVR, VOD, DVD Control

- In STB mode, these keys control DVR and VOD functions.
- In DVD and AUX modes, these keys may control your DVD depending on how you have programmed the remote.

- Records the selected program
- Stops DVD, VOD, or DVR content
- Pauses DVD, VOD, or DVR content
- Plays DVD, VOD, or DVR content
- Scrolls through available TV or video input sources
- Rewinds or fast forwards through DVR or VOD content
- Skips backward 7 seconds or forward 30 seconds through DVR or VOD content

- If your remote isn't working, make sure it's set to control the set-top box (push the "STB" button at the top of the remote) and has fresh batteries.
- If you lose your TV signal, try rebooting your router.
- A "No Signal" message doesn't mean your signal is lost—it means you have selected the wrong input on your TV.
- For further VTelevision tips and frequently asked questions, see Page 10 in your GigE Home Welcome Booklet.

Viewing and Browsing Control

- Accesses the Video on Demand Menu
- Accesses the Menu
- Accesses the DVR list of recordings
- Moves back one screen or one letter in text entry fields
- Serves no function
- Moves through selections. PiP stands for "Picture in Picture". Use the "PiP Browse" buttons to see a small video preview of what's on other channels.
- Selects and deselects screen items
- Clears all menu screens and returns to broadcast tv
- Serves no function
- Serves no function
- Accesses the Favorites Menu
- Displays text information about the selected program
- Displays or closes the Interactive Program Guide
- Shows the last 5 channels viewed
- Selects the next channel, up or down, when watching TV. Moves up or down one page in the IPG and in some menu screens.

Sound Control

These keys are assigned to the TV when the TV mode key is programmed with a valid code.

- Adjusts volume
- Mutes sound

Numeric Keys

- Enters channel numbers, text, and remote codes. Also use to enter your parental control PIN.
- Clears text and numbers in text fields
- Enters and saves (stores) an entry; opens viewing options menu